




Acer Aspire 5742 RAM Replacement

Upgrade the RAM in your Acer Aspire 5742.

Written By: Chris Chapman

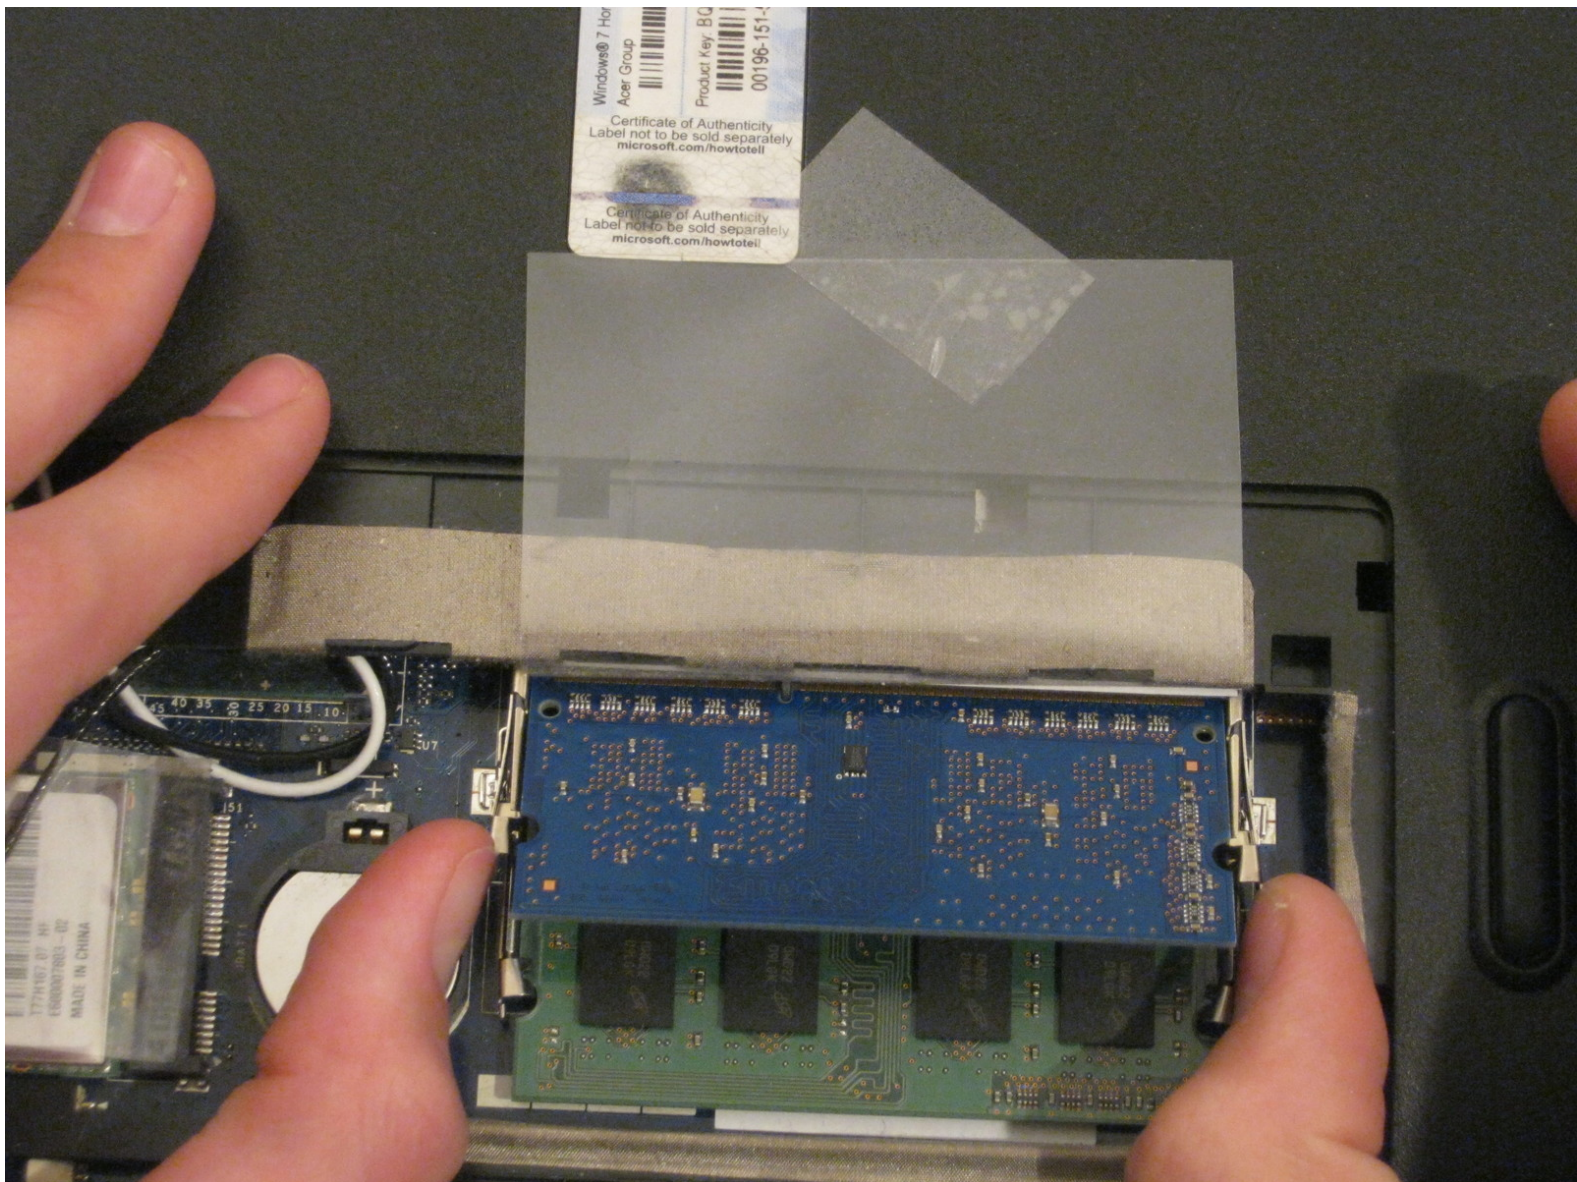

INTRODUCTION

Upgrade your RAM for a noticeable increase in speed.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Scotch tape](#) (1)
(*optional*)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Move the battery catch to the "unlocked" position.
- Pull back the second spring-loaded battery catch until the battery pops up.
- Remove the battery.

Step 2 — Cover Panel

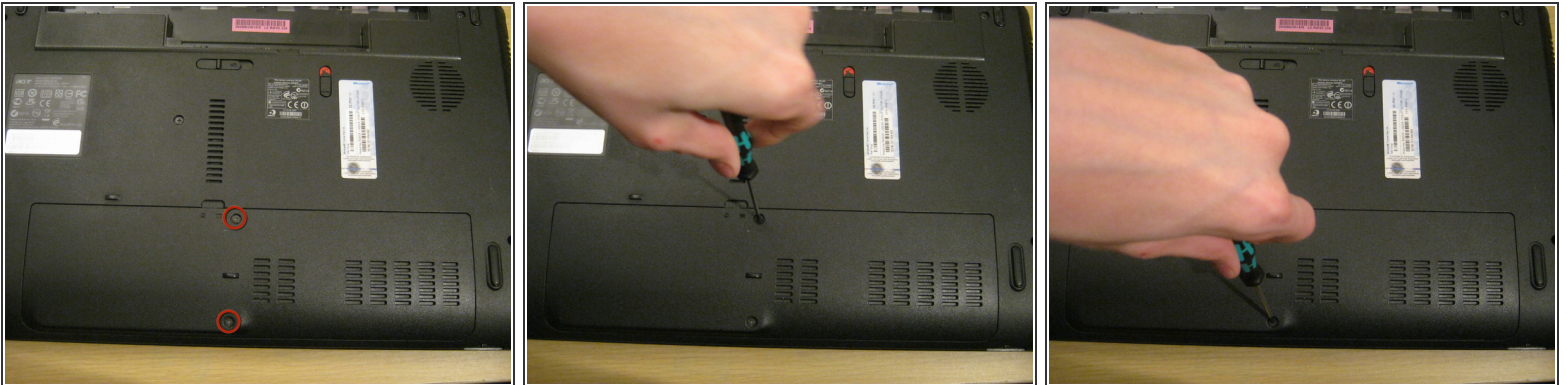

- Turn the notebook around to face you.
- There are two Phillips #00 screws securing the cover panel to the rest of the notebook. Remove these screws.

Step 3

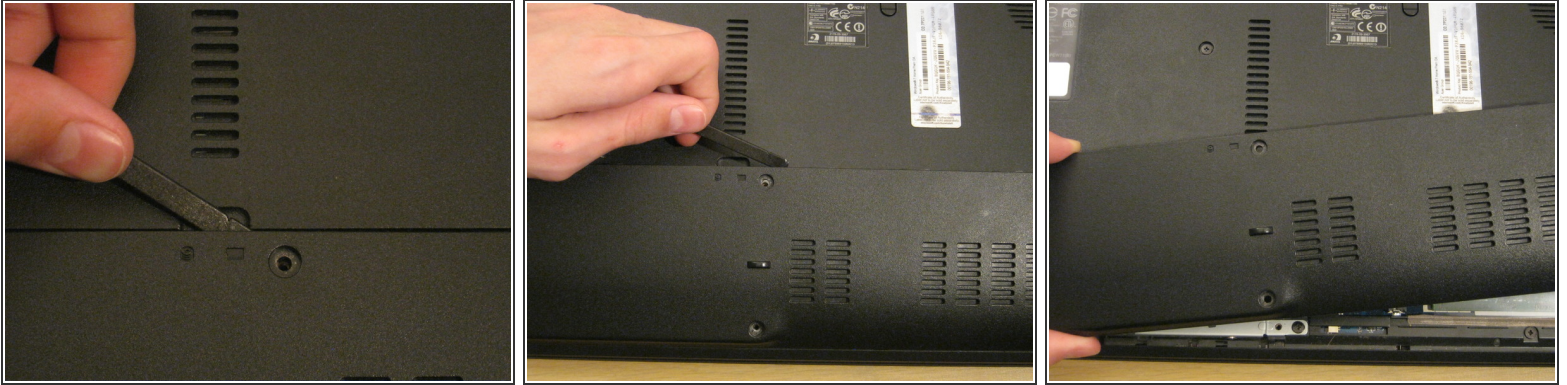


- Use a spudger to release the panel from the plastic retaining clips keeping it in place.

⚠ Do not apply too much force, or you may break the clips.



- Remove the panel and set it aside.

Step 4 — RAM

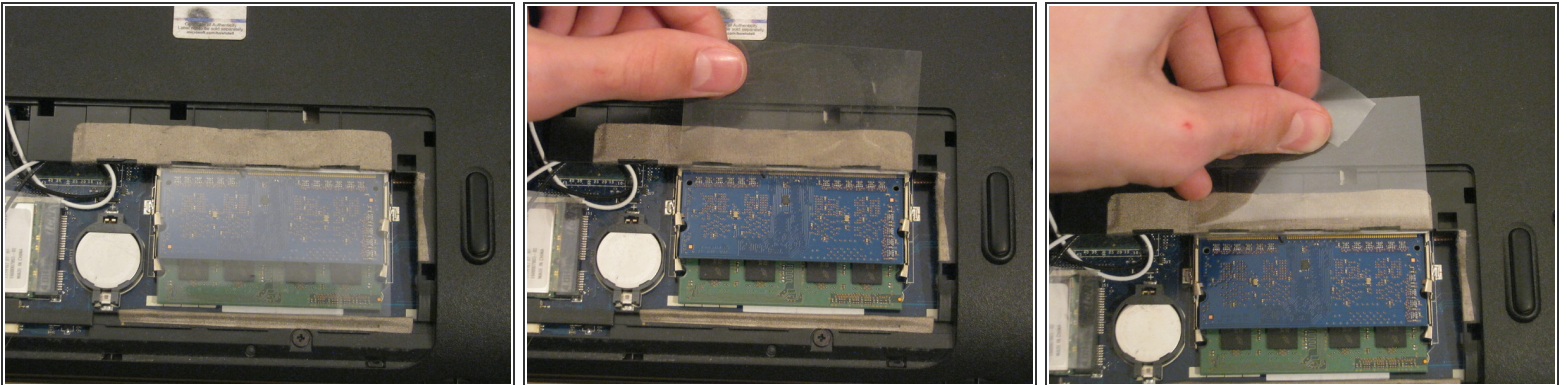




- The RAM is protected by a transparent cellophane cover.
 - Lift this cover away from the RAM. It will not come free from the RAM.
- i* You may wish to use some Scotch tape to hold the cover in place while you work.

Step 5

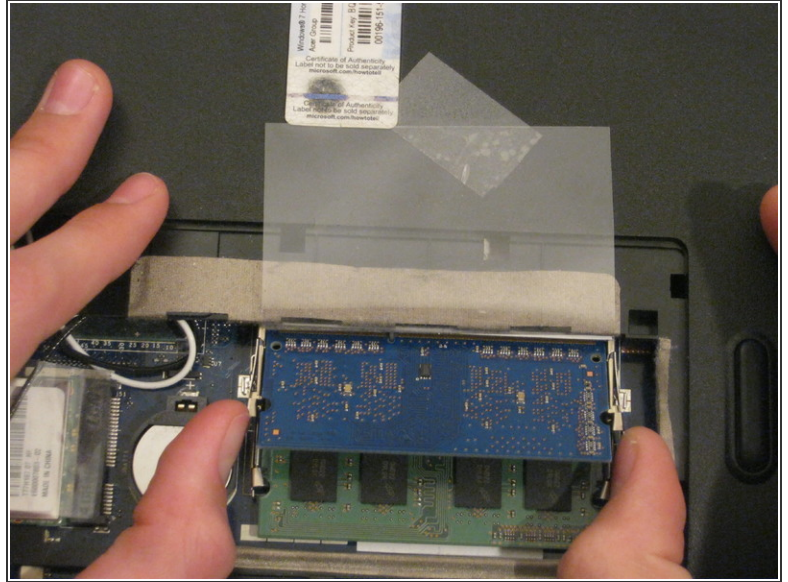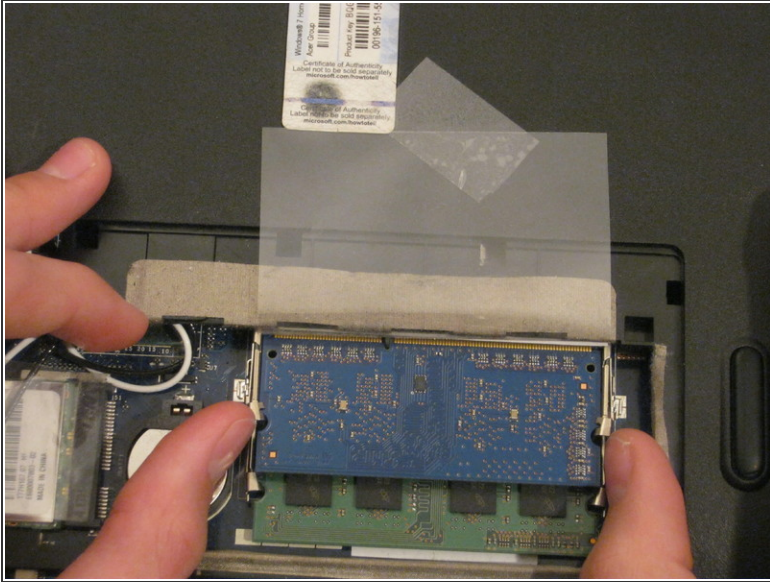


- Pull back the retaining clips either side of the RAM.
- It will spring up, ready to be removed.

Step 6

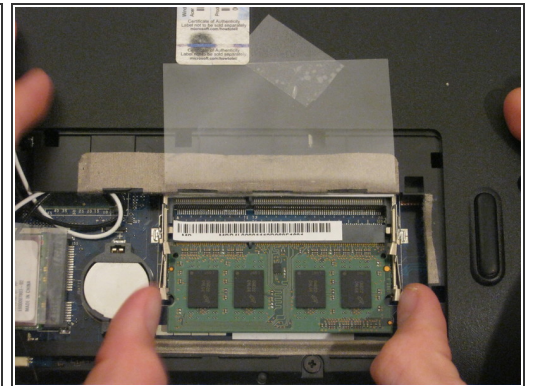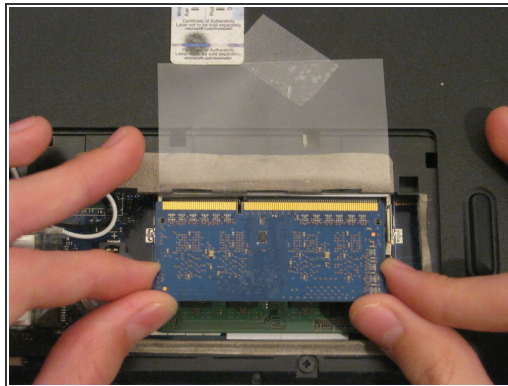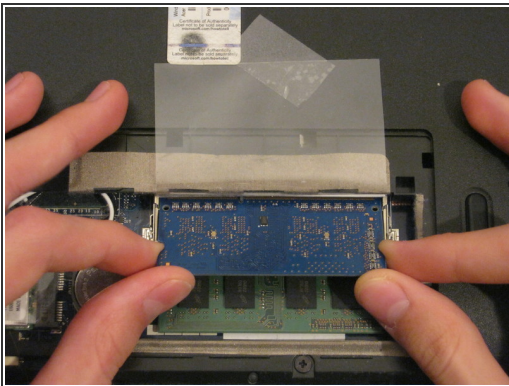

- Hold on to opposite edges of the RAM chip and gently pull it diagonally upwards to remove it from the computer.
- Repeat steps 5 and 6 for the second RAM chip if necessary.

Step 7

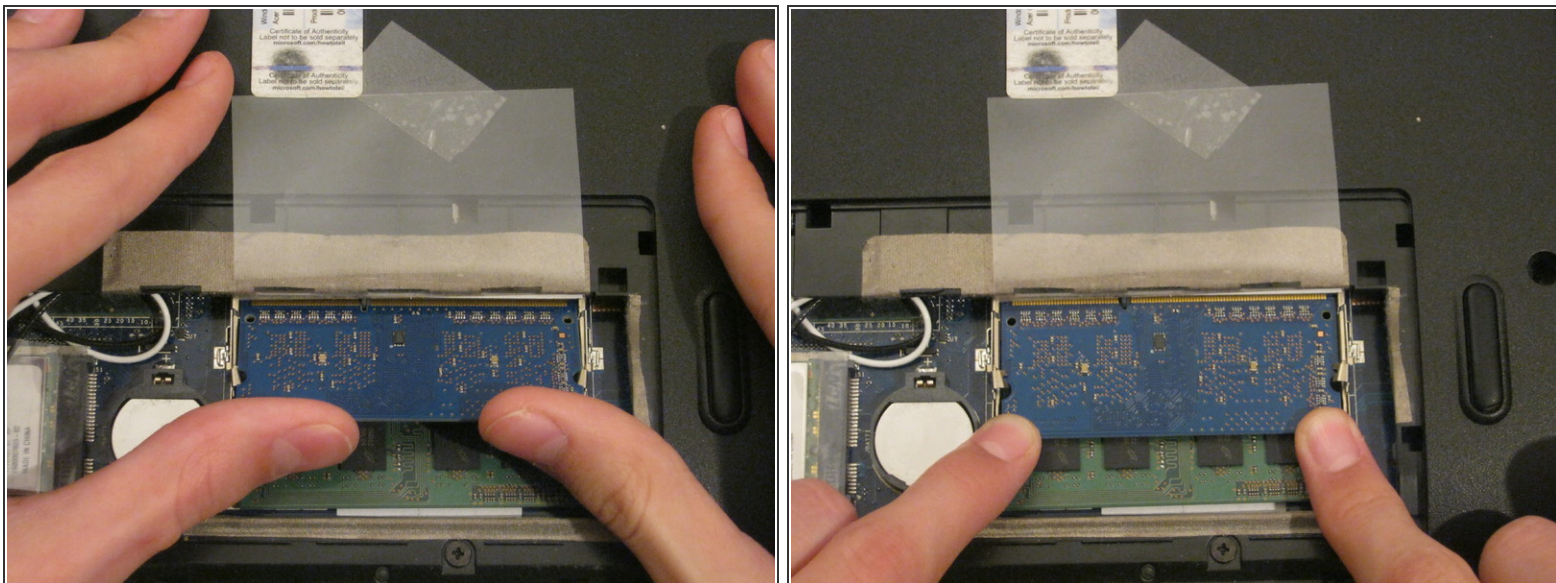

- When reinserting RAM, push it diagonally downwards until almost all of the gold connector strip is inside the socket.
- Push gently down on the RAM until the retaining clips click back over it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 05:46:25 AM.